

STM 焊片说明

焊片尺寸适用于 B. K. U. C. UF. CF.R. G.T.T.F. E. N. D. L. 等片型，根据安装方式选择相应的规格

订货代码含有 2 个变量，对于相应的选择规格：

订货代码：

STM - 1200 - 0.47 -

& P #





P2 片距

焊片代码： B. K. U. C. UF. CF. N.



R. G. T. T.F. E. D. L. 等

安装孔尺寸和焊片间距(mm)

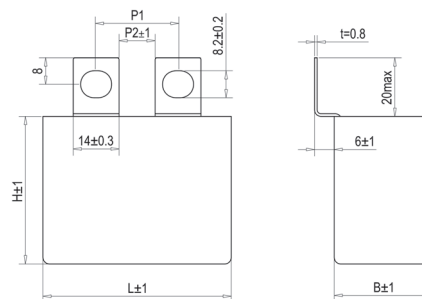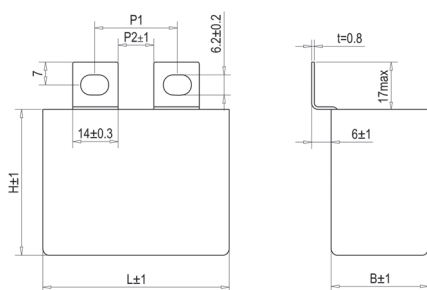


L	焊片 B 安装孔径 : M6			
	P2	P1	P2	P1
42.5	11	23-28	8	20-25
57.5	11	23-28	24	36-41

L	焊片 K 安装孔径 : M8			
	P2	P1	P2	P1
42.5	11	24-26	8	21-23
57.5	11	24-26	24	37-39

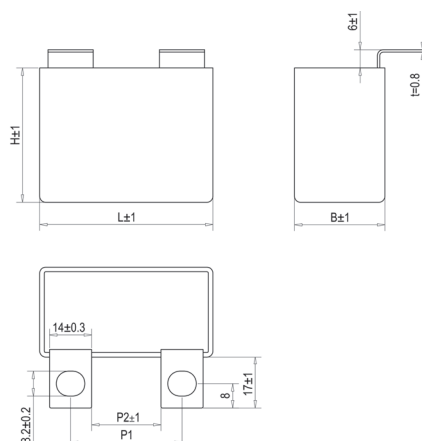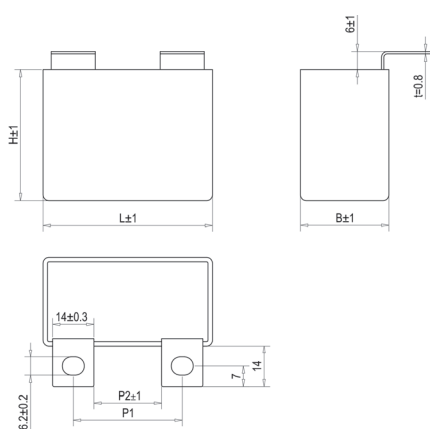


L	焊片 U 安装孔径 : M6			
	P2	P1	P2	P1
42.5	11	23-28	8	20-25
57.5	11	23-28	24	36-41


L	焊片 C 安装孔径 : M8			
	P2	P1	P2	P1
42.5	11	24-26	8	21-23
57.5	11	24-26	24	37-39

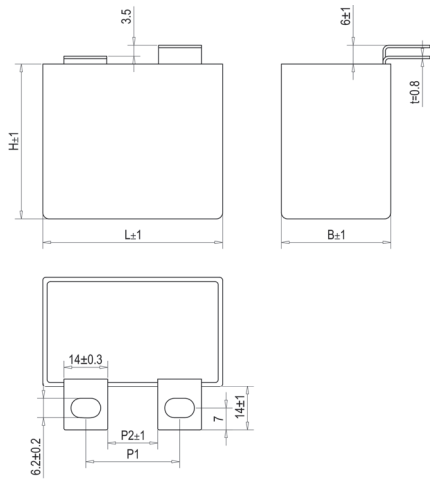


L	焊片 UF 安装孔径 : M6			
	P2	P1	P2	P1
42.5	11	23-28	8	20-25
57.5	11	23-28	24	36-41

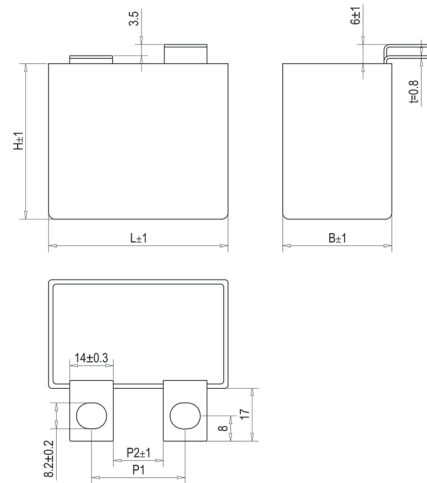


L	焊片 CF 安装孔径 : M8			
	P2	P1	P2	P1
42.5	11	24-26	8	21-23
57.5	11	24-26	24	37-39

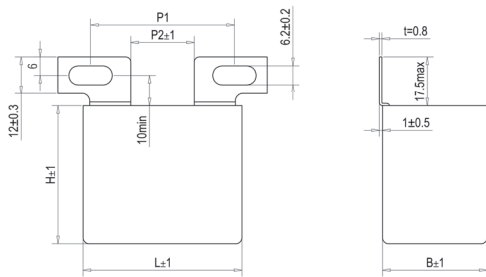



L	焊片 R 安装孔径 : M6			
	P2	P1	P2	P1
42.5	11	29-41	15	33-45
57.5	11	29-41	15	33-45
			28	46-58

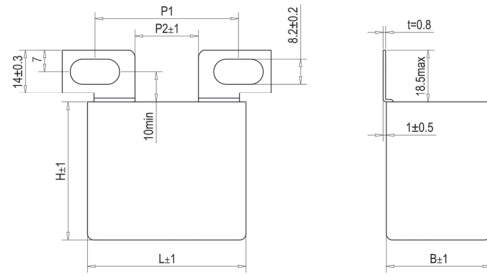



L	焊片 G 安装孔径 : M8			
	P2	P1	P2	P1
42.5	8	33-42	15	40-49
57.5	15	40-49	24	49-58
			28	53-62

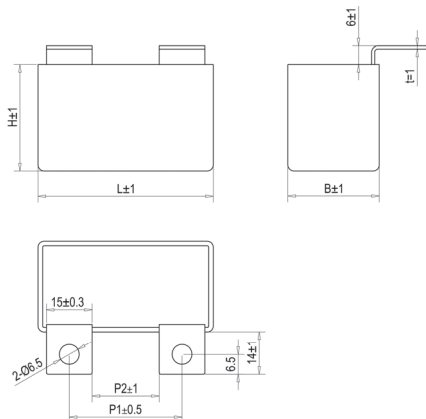



L	焊片 N 安装孔径 : M6	
	P2	P1
42.5	8	23
57.5	13	28
	22	37

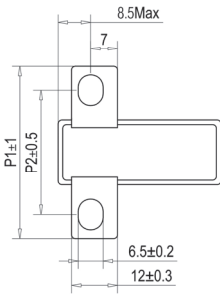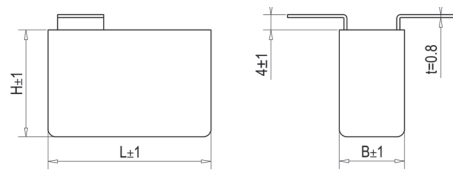



B	焊片 T 安装孔径 : M6	
	P2	P1
15	30	43
17	32	45

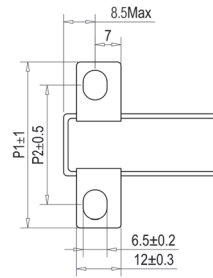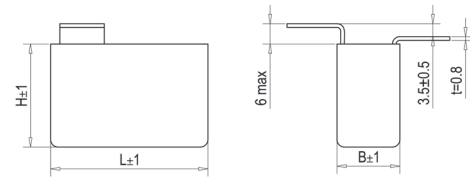

B	焊片 TF 安装孔径 : M6	
	P2	P1
15	30	43
17	32	45

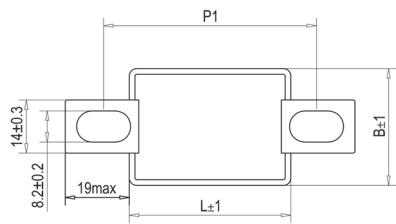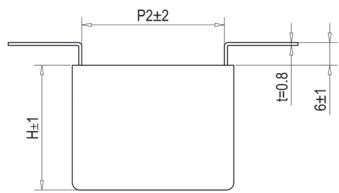

L	焊片 E 安装孔径 : M8	
	P2	P1
42.5	37	50-64
57.5	52	65-79

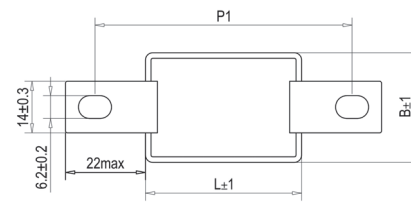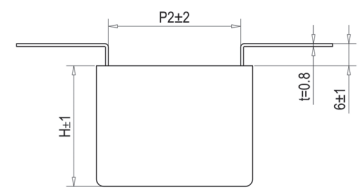

L	焊片 D 安装孔径 : M6	
	P2	P1
15	37	67-73
17	52	82-88